


V85000 SERIES REARMING INSTRUCTIONS MANUAL INFLATOR WITH AUTO BACK-UP SYSTEM

DISASSEMBLY

(see figure)

- Step 1:** Unscrew used CO2 cylinder in a counter-clockwise direction and immediately discard. Do not insert new cylinder at this time. It will discharge. To avoid confusion later in the rearming process, we suggest you throw away the old CO2 cylinder now.
- Step 2:** Unscrew the clear cap on the bottom of the inflator in a counter-clockwise direction. Remove and discard used yellow plastic bobbin element.
- Step 3:** Rinse any white residue remaining in or on the cap and from the body of the inflator. Shake dry or allow to air dry. Fresh water rinse is desirable.
- Step 4:** Check date on side of bobbin to ensure the bobbin is less than 4 years old. Insert the fresh bobbin, lining up slots on bobbin with the ridges inside the body. Replace clear cap on inflator securely but do not over-tighten. The indicator at the bottom of the cap will change from red to green when the bobbin is properly loaded.
- Step 5:** If manual lever is not locked or the green indicator tab is missing, close the lever within the inflator body and carefully insert a new green indicator tab so that it fully covers the red semi-circle on the body.

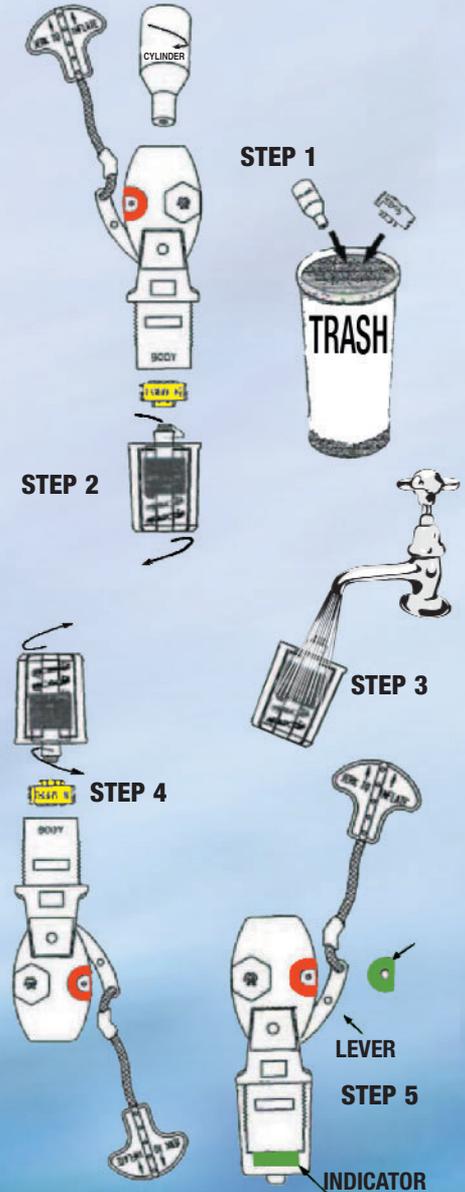

LELAND®

www.MaximumInflation.com

V85000 SERIES REARMING INSTRUCTIONS MANUAL INFLATOR WITH AUTO BACK-UP SYSTEM

REARMING

Note: Rearming must follow the sequence to the right.

Step 6: Look into the threaded cylinder receiver and view the gasket. Replace if worn.

Step 7: Inspect the face of the new cylinder. Be sure it is smooth and has no holes or scratches. There is a gross weight on the cylinder. If you have any question about cylinder integrity, weigh the cylinder on a small scale, such as a postage scale. Compare the weight printed on the cylinder to the actual weight. If they do not match, get another cylinder.

Step 8: Screw the new cylinder in a clockwise direction into the cylinder receiver firmly. Do not over-tighten, but ensure the fit is snug.

Step 9: Check arming indicators on your inflator are green every boating trip. They will tell you if there is need for service. Check the cylinder face regularly. Ensure it is operational.

Enjoy your inflatable life vest!

